

# How To.

## INSTALLATION GUIDE

### BEFORE YOU START


Prior to installation, choose a suitable location on flat ground for your Garden Bed, a minimum 118cm x 92cm is required. To ensure the installation of your Stratco Garden Bed proceeds smoothly you should confirm that all the components listed in this installation guide have been supplied.

Carefully read this installation guide to familiarise yourself with all the steps involved, and ensure that you have the correct tools and equipment for the job. All required tools are available for purchase at your local Stratco store.


Use heavy gloves when handling steel sheets and parts. Never attempt to assemble the garden bed in windy conditions.

### COMPONENTS


Corner Cap  
x8




Bolt & Wing Nut  
x56

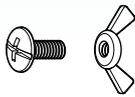

Corner  
x8

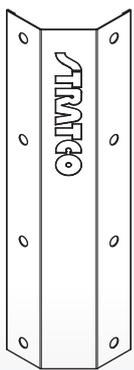


Panel  
x4 - 840mm  
x4 - 1100mm

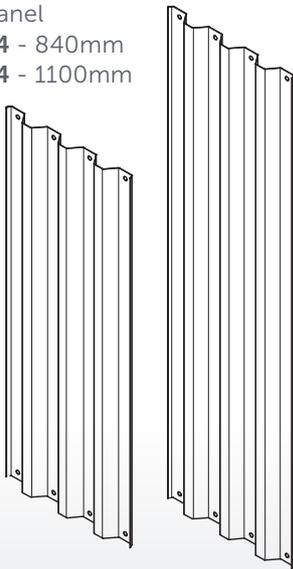


### TOOLS

Pliers

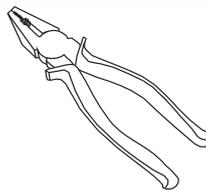

Phillips-head Screwdriver

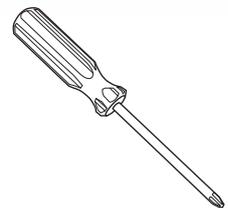

### SAFETY GEAR

Gloves



Safety Glasses




# RAISED GARDEN BED - DOUBLE HEIGHT


RAISED GARDEN BED - DOUBLE HEIGHT INSTALLATION GUIDE

## ASSEMBLY - STEP 1

Assemble the two short sides of the Raised Garden Bed as illustrated below. Firstly, lap two 840mm panels over each other, then two Corner pieces. Fasten one Bolt and Wing Nut through the middle holes of the Corner pieces and Panels. Fasten Bolts and Wing Nuts through the remaining holes. Complete these steps for both ends of the Panel.

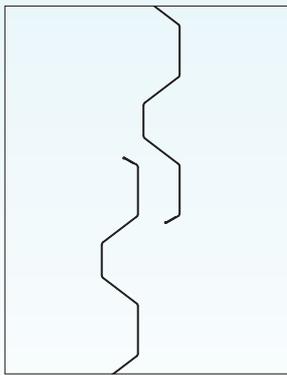


Ensure the top Panel is lapped over the bottom Panel.

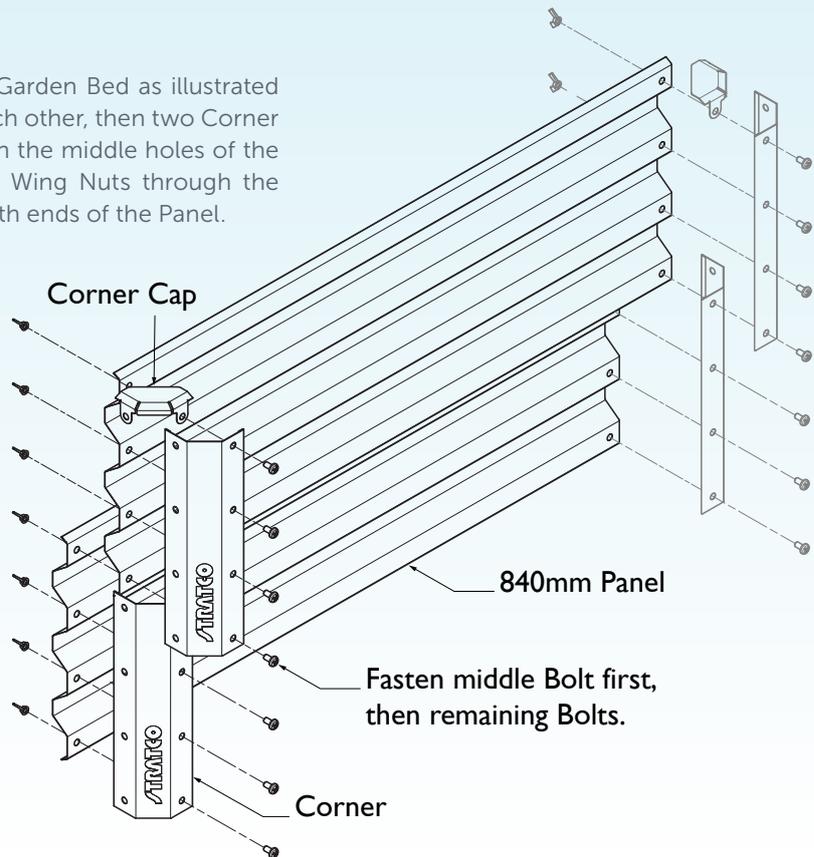

## ASSEMBLY - STEP 2

Fasten the 1100mm Panels to the Panels assembled in step 1.

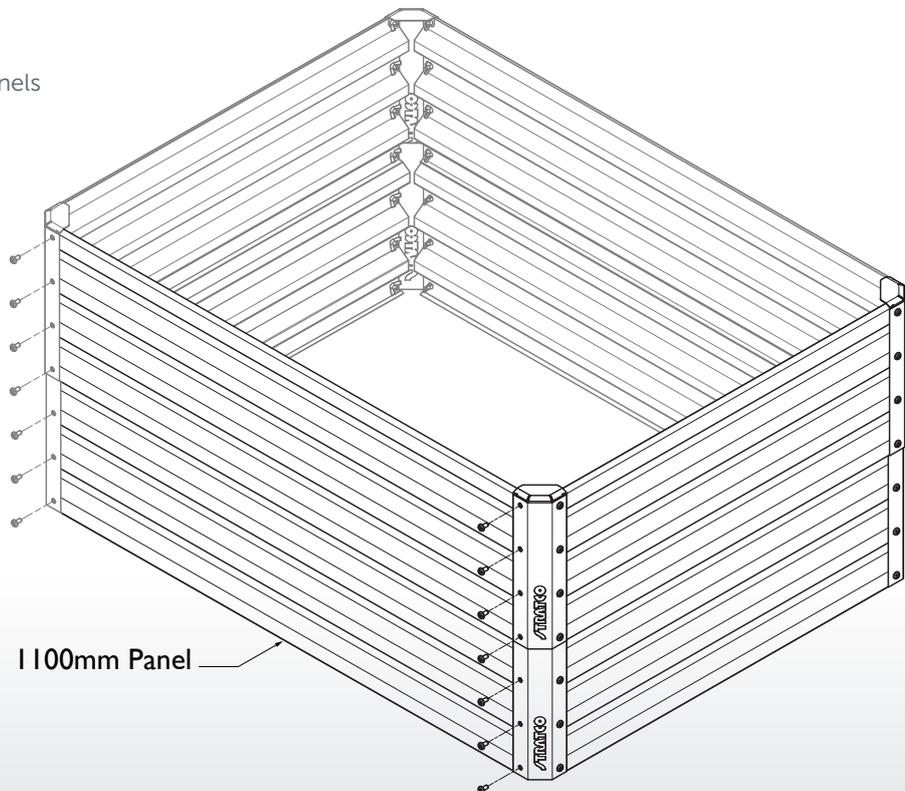

« SCAN THIS QR CODE TO FIND A STRATCO NEAR YOU

1300 155 155  
stratco.com.au

All brands and logos/images accompanied by © or ™ are trade marks of Stratco (Australia) Pty Limited. © Copyright January 2020

How To.

